


Installation Notes for: WR-S-3

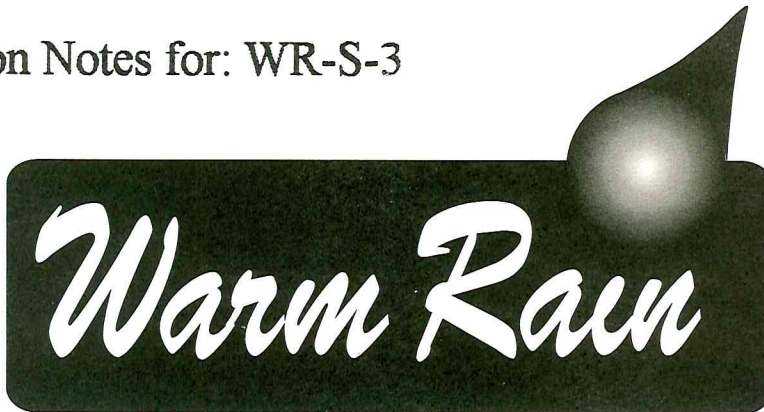

Removable Corner Skirt

1. Build Frame along the 61" back walls, 20" above the floor.
2. Level Frame at exactly 20" above the floor.
3. Bolt together the 3-piece skirt (FINGER TIGHT ONLY) in the pre-drilled holes.
4. Put Swirlpool in place on top of frame.
5. Slide skirt under Swirlpool.
6. Adjust position of skirt – leave top radius of skirt fully exposed.
7. Mark position of skirt on floor and end walls.
8. Remove Swirlpool from frame.
9. Screw the skirt in pre-drilled holes to end walls and floor along marked lines.
10. Install Swirlpool on top of skirt and frame.



Great Lakes Plastics Corporation

P.O. Box 600 • Houghton County Airpark • Hancock, Michigan 49930 • (906) 482-3750

Fax: (906) 482-2585 • E-mail: tedk@warmrain.com • Website: www.warmrain.com